


# Mounting BBQ Guru to Offset Type Smokers




Draft Inducer

Deflector Plate

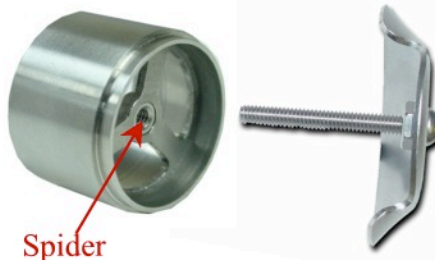

Spider

Deflector Plate Opening

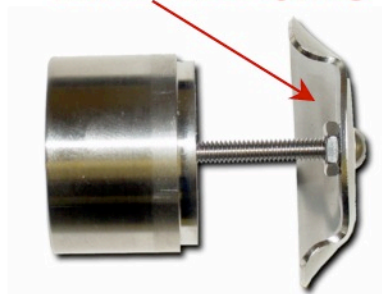

1. Drill 1" hole with a hole saw or step drill in firebox, under fire grate level. ( see red arrows for suggested areas).
2. Do not drill a hole in your existing dampers, you may need them for supplemental air.
3. Place deflector plate in hole on inside of firebox with the opening facing down.
4. Place inducer sleeve in hole on outside of firebox with spider closest to firebox wall and screw deflector plate to inducer sleeve until snug.
5. Firmly push Guru blower nozzle into inducer sleeve.
6. You are ready to cook.

